 
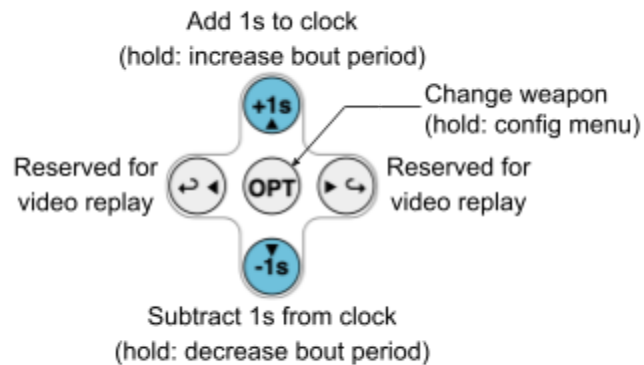 


## Remote

Red buttons affect score, blue buttons affect time:

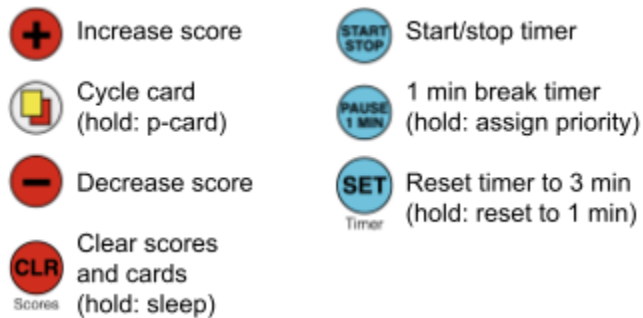

These buttons are also used for navigation in the config menu. Use OPT to select and CLR to exit.

## Remote charge

The remote LED will flash when a button is pressed. It flashes green when charged >40%, yellow for 20-40%, and red for 20% or below.

 
To recharge the remote, plug in a USB-C cable. The LED will be red while charging and green when charged.

See the latest manual online at:  
<https://skewered-fencing.com/scoring-box-manual>

Questions? Comments? Contact us at  
[info@skewered-fencing.com](mailto:info@skewered-fencing.com)



# SKEWERED FENCING Scoring Box Quick Start Guide

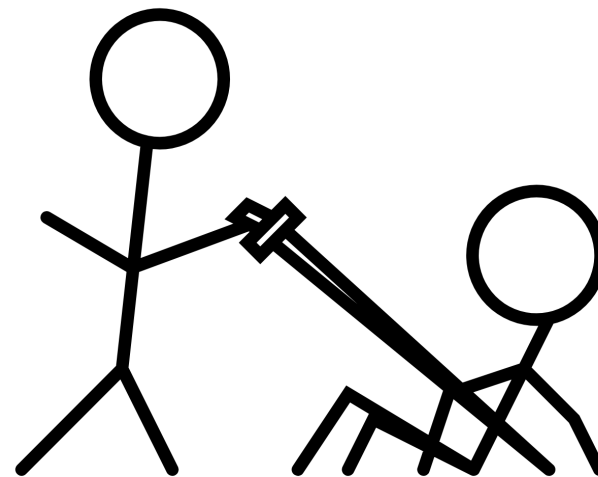

## Basic operation

Thank you for purchasing this scoring machine!

Get started right away by plugging in the provided 5V power supply to Power and each floor cord to the Left and Right strip connections. If you have a grounded strip, plug the strip into the Piste connection.

Tap Button 1 (red) to switch weapon modes. Hold Button 1 (red) to enter the config menu.

The two white buttons are reserved for future use.

## Pairing a remote

Your fencing box will come with the remote already paired. If the remote becomes unpaired, you can use this procedure to pair your remote:

1. Press and hold Button 1 (red) on the box for one second until the configuration menu appears, then release.
2. Press OPT on the remote twice in a row. The box will detect the remote's strip ID.
3. Press CLR on the remote several times to exit the config menu.

To configure the strip ID of a remote, press and hold both the "1" button and the "SET" button on opposite corners until the led flashes 4 times rapidly. Then enter a two digit ID and the led will flash rapidly again. Pair your updated remote with your box.

